

**TNTv**

**Digital Signage**

**Руководство**

**Пользователя**

**2013**

---

Smart Matrix Multimedia Commutator

**Модель:** TNT SMMC-6000

**Версия ПО 2.4**



– True Network Television

# Содержание

<b>ГЛАВА 1: ВВЕДЕНИЕ</b>	5
1.1	.....
1.2	.....
1.3	.....
1.4	.....
1.5	.....
<b>ГЛАВА 2: ПЕРВОЕ ВКЛЮЧЕНИЕ КОММУТАТОРА</b>	
<b>10</b>	
2.1	.....
2.2	.....
<b>ГЛАВА 3: КОНСОЛЬ УПРАВЛЕНИЯ КОММУТАТОРОМ (ПО)</b>	
<b>13</b>	
3.1	( «MAIN PAGE»).....
3.2	( «SET») .....
3.2.1	( «SET» «TRANSMITTER/RECEIVER») .....
3.2.2	( «SET» «SITUATION(BROADCASTING)») .....
3.2.3	( «SET» «Rx GROUP SET») .....
3.3	( «EXECUTION») .....
3.3.1	( «EXECUTION» «BROADCASTING SYSTEM») .....
3.3.2	( «EXECUTION» «VIDEOWALL») .....
3.4	( «SYSTEM») .....
3.4.1	( «SYSTEM» «SYSTEM CONFIGURATION») .....
3.4.2	( «SYSTEM » «IP CONFIGURATION»).....
3.4.3	( «SYSTEM » «MAINTENANCE»).....
3.4.4	( «SYSTEM » «SYSTEM EVENTLOG») .....
3.4.5	SNTP ( ) ( «SYSTEM » «SNTP CONFIGURATION»).....
3.4.6	( «SYSTEM » «USER AUTHENTICATION») .....
3.4.7	( «SYSTEM » «DIAGNOSTICS») .....
3.5	( «NETWORK»).....
3.5.1	( «NETWORK» «PROTOCOL») .....
3.5.2 MAC	( «NETWORK » «MAC TABLE»).....
3.5.3	( «NETWORK » «PORT STATISTICS») .....
3.5.4	( «NETWORK» «PORT CONFIGURATION»).....
3.5.5	(TRUNK) ( «NETWORK» «PORT TRUNK»).....
3.5.6	( «NETWORK» «LOOPBACK DETECTION») .....
3.6	( «LANGUAGE») .....
3.7	( «FACTORY DEFAULT»).....

3.8	( «SYSTEM REBOOT» ) .....	52
-----	---------------------------	----

## ГЛАВА 4: МЕНЮ ПОЛЬЗОВАТЕЛЯ

52

<b>4.1</b>	( «SET» ) .....	53
4.1.1	( «SET»    «TRANSMITTER/RECEIVER»)	
	.....	53
4.1.2	( «SET»    «SITUATION(BROADCASTING)») .....	54
4.1.3	( «SET»    «Rx GROUP SET»).....	54
<b>4.2</b>	( «EXECUTION») .....	55
4.2.1	( «EXECUTION»    «VIDEOWALL») .....	55
<b>4.3</b>	( «SYSTEM») .....	55
4.3.1	( «SYSTEM »    «USER AUTHENTIFICATION») .....	55

## ГЛАВА 5: РЕКОМЕНДАЦИИ ПО РАБОТЕ С SMM КОММУТАТОРОМ

(НАСТОЯТЕЛЬНО РЕКОМЕНДУЕМ ПРОЧИТАТЬ ЭТУ ГЛАВУ)

56

5.1	.....	56
5.2	.....	56
5.3	.....	57

, / *SMM* *TNT*.  
, / *SMM*  
*TNT*

*SMM*, *TNT*



1:

1.1

## Digital Signage —

( ) — Digital Signage ,  
( . . ) .  
, , , , ,  
,

Smart Matrix Multimedia Commutator (SMMC) —

, ( )

•

( ).

( )

( )

( , , . .).

•

- TNT MMS-500H-T — HDMI + + + USB + ( ) + RS232
  - TNT MMS-500V-T — VGA + + + USB + + RS232
  - TNT MMS-520H-T — HDMI + + RS232,

- TNT MMS-530V-T — VGA + USB + ,
- TNT MMS-500H-R — HDMI + + + USB + + RS232
- TNT MMS-500V-R — VGA + + + USB + + RS232
- TNT MMS-520H-R — HDMI + + RS232,
- TNT MMS-530V-R — VGA+USB+ ,

( )  
 ( , , . .)  
 (LAN, ), **Gigabit Ethernet (1000Base-T)**  
 TCP/IP.

,  
 ( ), RS232, USB,

,  
 ( ).


SMM – 300 .

, SMM  
 TNT SMMC-6000 – 12.

	<b>TNT MMS-500H-R</b>	<b>TNT MMS-520H-R</b>	<b>TNT MMS-500V-R</b>	<b>TNT MMS-530V-R</b>
<b>TNT MMS-500H-T</b>	HDMI Image HDMI/USB Audio  USB RS232	HDMI Image HDMI Audio RS232	VGA Image USB Audio  USB RS232	VGA Image USB
<b>TNT MMS-520H-T</b>	HDMI Image HDMI Audio RS232	HDMI Image HDMI Audio RS232	VGA Image RS232	VGA Image
<b>TNT MMS-500V-T</b>	VGA Image USB Audio  USB RS232	HDMI Image RS232	VGA Image USB Audio  USB RS232	VGA Image USB
<b>TNT MMS 530V-T</b>	HDMI Image USB	HDMI Image	VGA Image USB	VGA Image Analog Audio USB



## 1.4

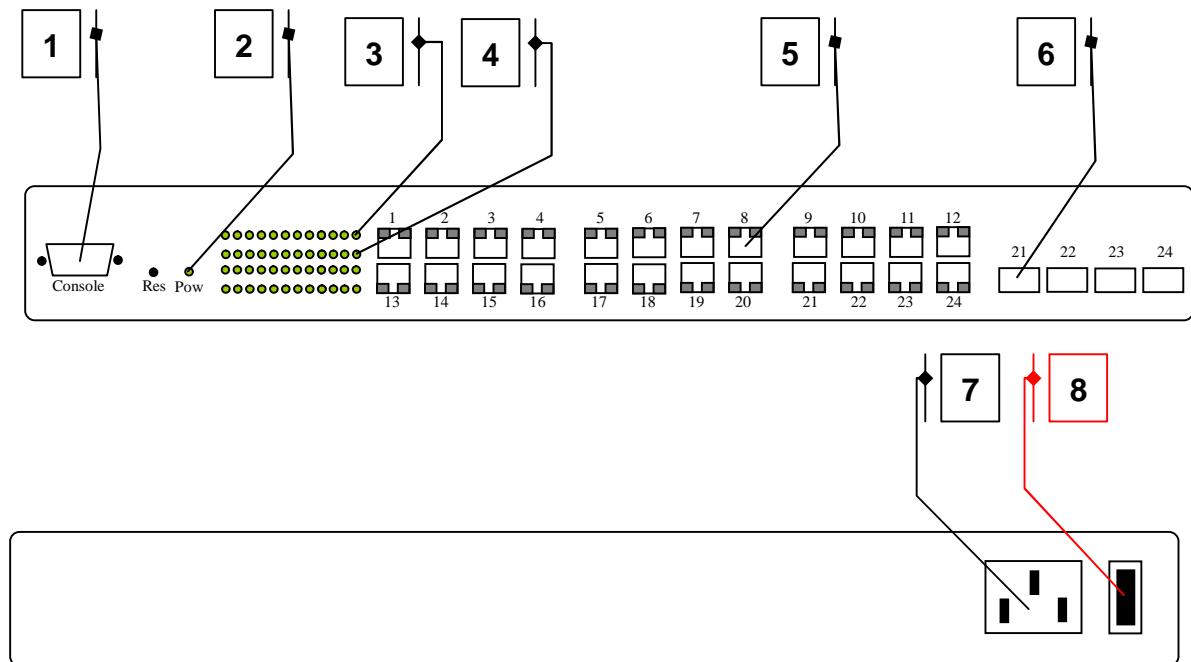

- 1.
- 2.
- 3.
- 4.
5. 1-24

/ ( 10/100/1000 Base-T ).

6. 21-24

Mini GBIC ( SFP ). 21-24

7. (100-240V)
- 8.

**1.5**

- —
- —
- —
- —


**2:**

## 2.1


- 1: LAN
- 2: LAN
- 2: «Power»
- 3.

## 2.2

- 1:

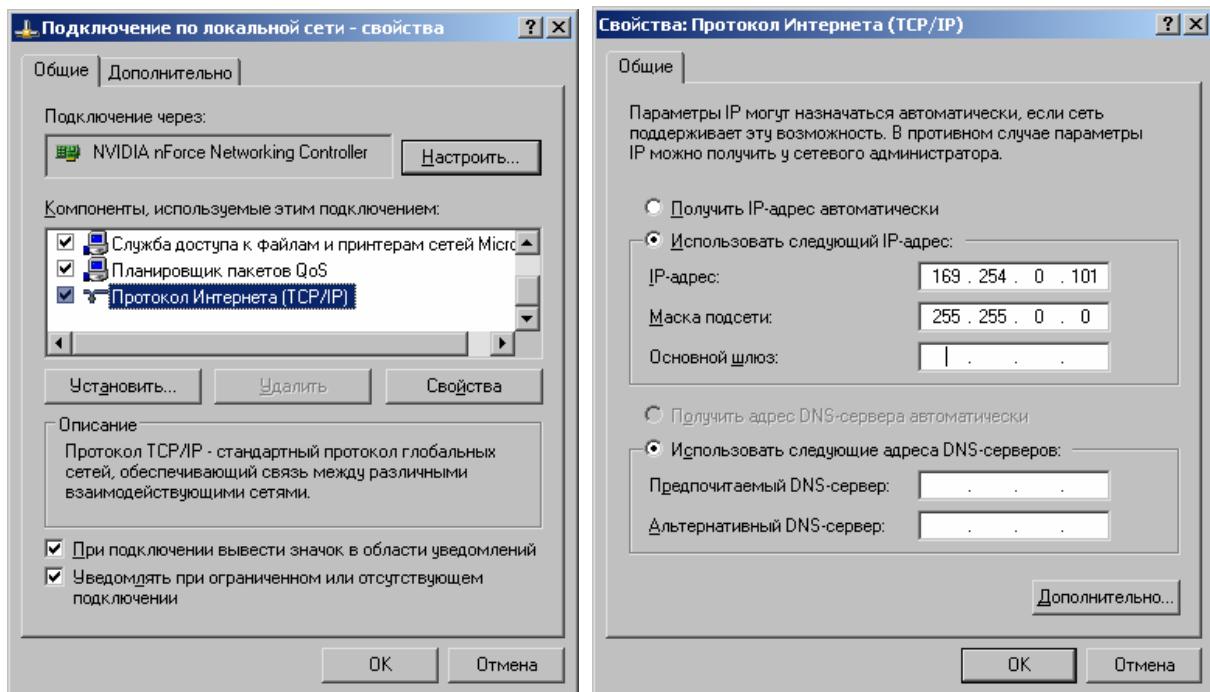

- 2: WEB (Firefox ( 3.6 ) Chrome ( 13 )) IP 169.254.2.1

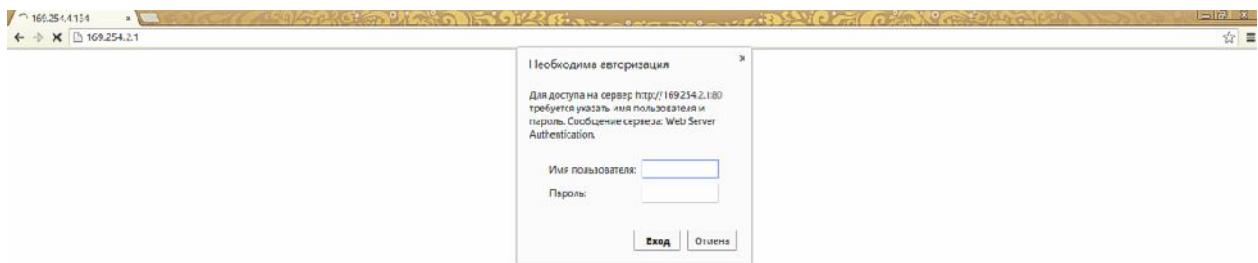


4:

- (Login): *admin* ( )

- **(Password):** *password* ( ),  
 ( . . . 3.4.6 ).

5:

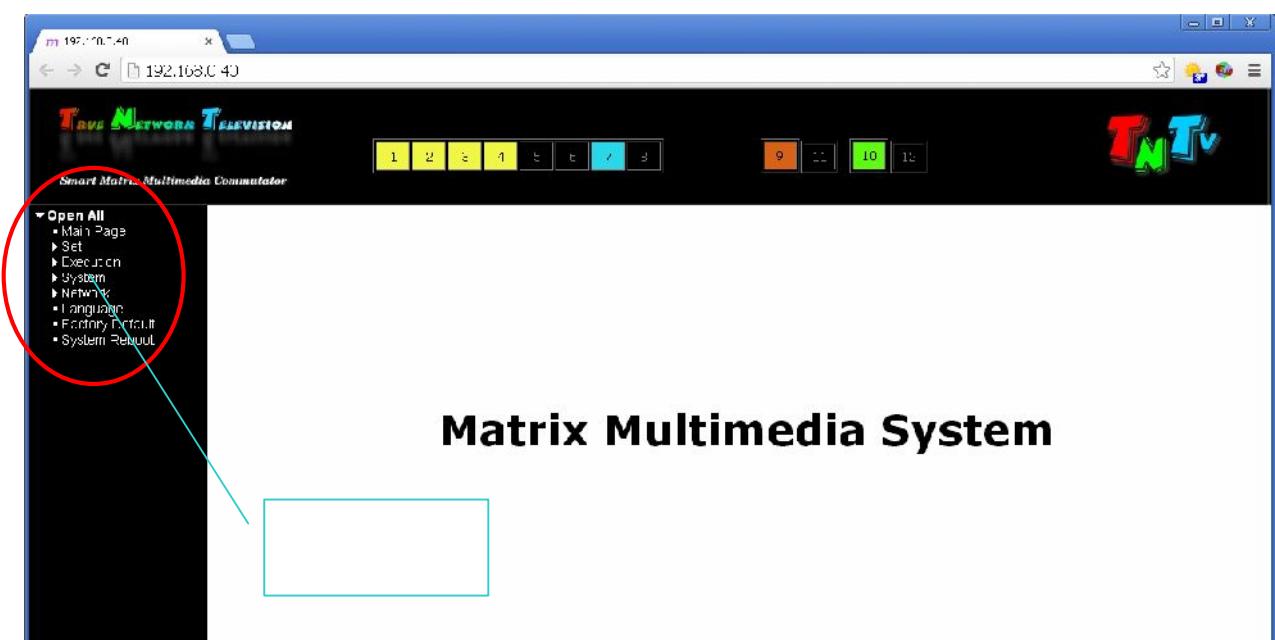

( ).

( );


, , c

The screenshot shows a software window titled "Smart Matrix Multimedia Commutator". A dropdown menu is open at the top left, with "語言設定" (Language Setting) highlighted. Two red arrows point from the right side of the screen towards two separate dropdown menus. The top dropdown menu, located on the right, also has "語言設定" selected. The bottom dropdown menu, located further down on the right, also has "英文" (English) selected. Both dropdown menus have a list of language options: English, Traditional Chinese, Simplified Chinese, and Chinese.

**6:**

«System».

«IP Configuration».

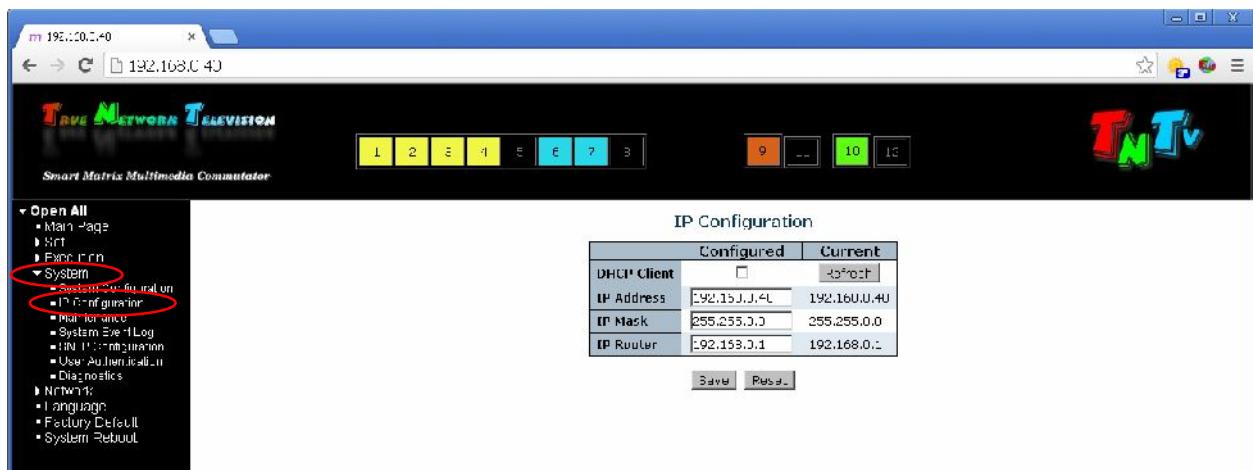

- **7:** IP 169.254.2.1.
- **8:** «DHCP Client», IP  
DHCP ( ).

IP , «IP address»,  
 «IP Mask» IP «IP Router». «DHCP Client»,

- **9:** «Save»
- **10:** «Reset».
- **11:** ..


3:

( )


♦ \_\_\_\_\_ :

### 3.1 ( «Main Page»)



SMM , ( LAN), IP IP DHCP  
( ) , SMM ,  
,

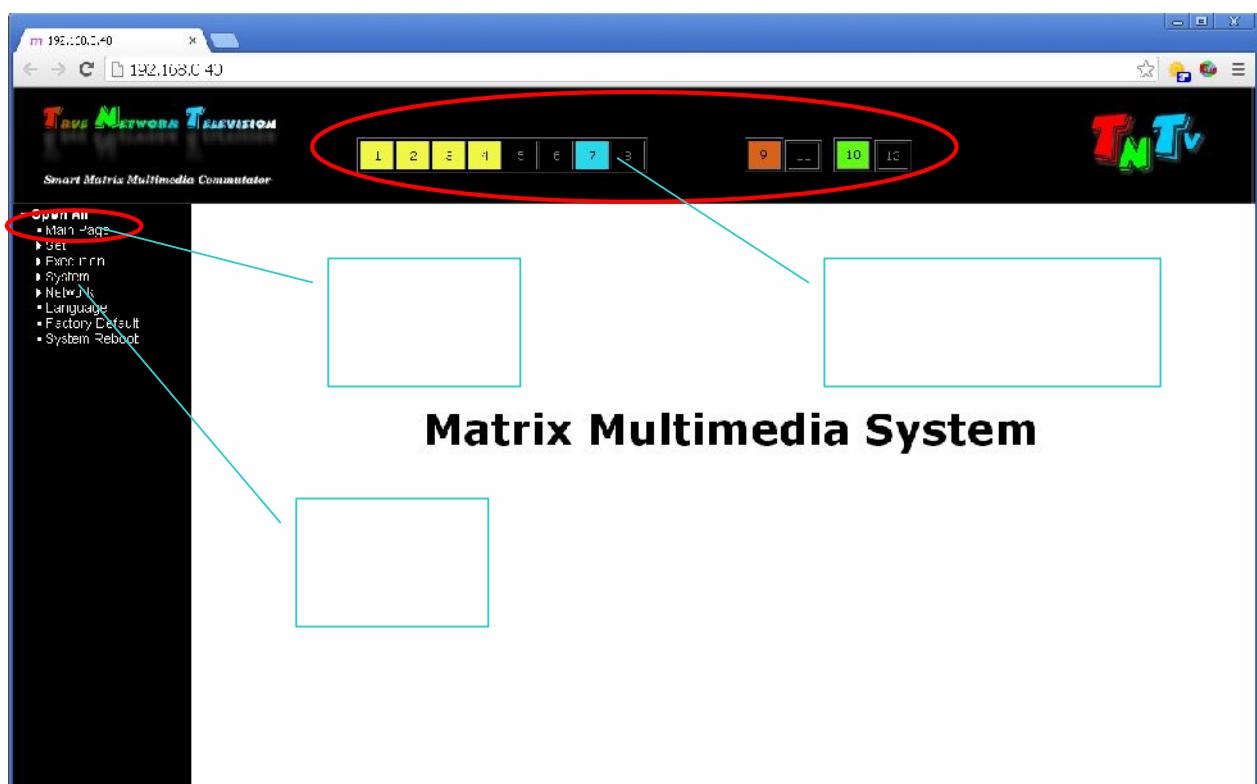

### Matrix Multimedia System

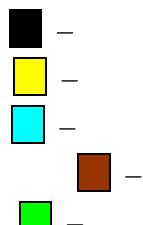


( SMM ).
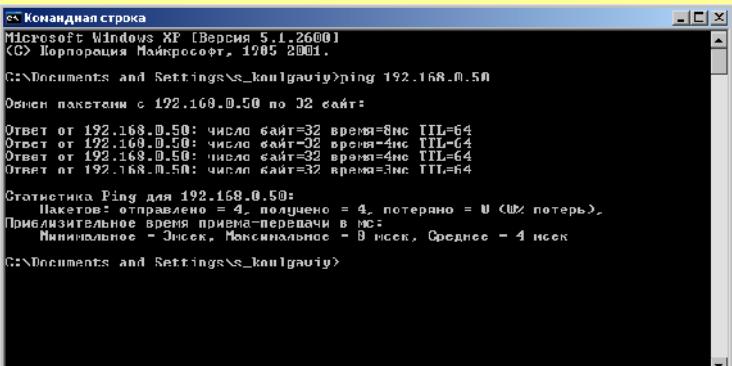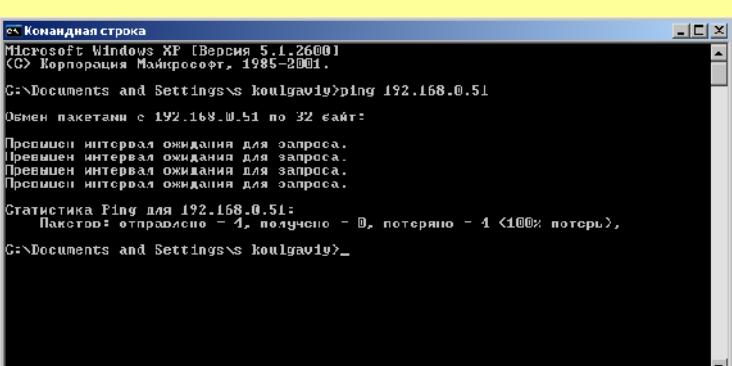
```
• , ( : ping IP-  
• ( : ping 192.168.0.50). ,  
( ) ,  
  
  
  

```

**3.2** ( «Set»)
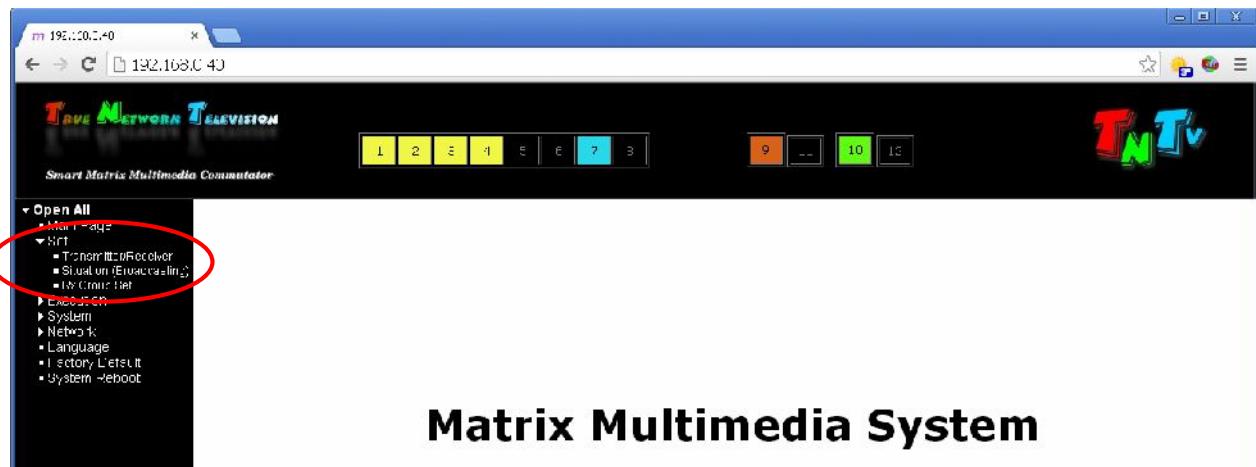
## «Set».



### 3.2.1

( «Set» «Transmitter/Receiver»)

( .  
( ), SMM

«Transmitter/Receiver».

«Transmitter», «Receiver»      «Search».

«Transmitter».

«Search»,

«Transmitter»

No.	IP Address	MAC	Port	Symbol	Status	Explain	Tx Mode	Rx Mode	Default	Delete
T1	192.168.0.37	00:17:03:00:0E:5E	7	TV record.	GREEN	STB a 1	Graphic	OFF	Default	Delete
T2	192.168.0.20	11:17:00:00:15:5C	6	PVR	GREEN	STB a 1	Video	OFF	Default	Delete

- «No.» – («T1», «T2» . .).
- «IP Address» – IP

(  
( ),



- «**MAC**» – MAC
- «**Port**» –
- «**Symbol**» –

MAC

«Enter».

16

1

2

– 16

– 8.

!!!

<<

>>

- «Status» –

(

),

No.	IP Address	MAC	Port	Symbol	Status	Explain	Tx Mode	ATI Mode	Default	Delete
T1	192.168.0.20	00:17:03:D0 12:E0	6	AAAAAAA	Green	Стенд 1	Video	OFF	Default	Delete
T2	192.168.0.37	00:17:03:C0 03:E0	7	TV Ресив.	Red	Стенд 1	Стринг	OFF	Default	Delete

- «Explain» –

- «Tx Mode» –

«Graphic Mode»

«Video

Mode»).

- «ATI Mode» –

- «Default» –

( IP )

- «Delete» –

SMM

«Receiver».

«Search»,

«Receiver»

The screenshot shows a web-based interface for managing a True Network Television system. The top navigation bar includes links for Main Page, Set, Transmitter/Receiver, System, Network, Language, Factory Default, and System Reboot. The address bar shows the URL 192.168.0.40. The main content area features a 'Transmitter/Receiver Set' table with the following data:

No.	IP Address	MAC	Port	Symbol	Status	Explain	USB	Default	Delete
R1	192.168.0.1	00:17:03:D0:04:0C	1	1x1	Red	Стенд 1	ON	Default	Delete
R2	192.168.0.31	00:17:03:00:08:F3	2	1x2	Red	Стенд 1	OFF	Default	Delete
R3	192.168.0.31	00:17:03:00:08:F1	1	2x1	Green	Стенд 1	OFF	Default	Delete
R4	192.168.0.3	00:17:03:D0:04:0C	4	2x2	Green	Стенд 1	ON	Default	Delete

- «**No.**» – («**R1**», «**R2**» . . ).
- «**IP Address**» – IP
- «**MAC**» – MAC
- «**Port**» –
- «**Symbol**» –
- «**Status**» –
- «**Explain**» –
- «**USB**» – / USB
- «**Default**» – ( IP )
- «**Delete**» – SMM

### 3.2.2 ( «Set» «Situation(Broadcasting)»)

SMM  
«Situation (Broadcasting)».

The screenshot shows a Windows application window titled "True Network Television". The main menu bar includes "File", "Edit", "View", "Tools", "Help", and "About". The left sidebar contains a tree view with nodes like "Open All", "Main Page", "Set", "Executive", "System", "Network", "Language", "Factory Default", and "System Reboot". The main content area is titled "Situation (Broadcasting)" and displays a table of receiver configurations:

No.	Status	Symbol	N	T1	T2
R1	<input checked="" type="radio"/>	1-1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
R2	<input checked="" type="radio"/>	1-2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
R3	<input checked="" type="radio"/>	2-1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
R4	<input checked="" type="radio"/>	2-2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>

At the bottom of the screen are buttons for "Cancel", "Save", and "Exit to Main". The background features the "TNTv" logo.

«N»,

(«T1», «T2» . .).

(«T1», «T2» . .)

No.	Status	Symbol	N	T1	T2
R1		1x1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/> DVD
R2		1x2	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
R3		2x1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
R4		2x2	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>

«T1»

«T1»      «R3»

Cancel Save Setup to Rx

(«R1», «R2» . .).

No.	Status	Symbol	N	T1	T2
R1		1x1	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
R2		1x2	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
R3		2x1	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
R4		2x2	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>

**Cancel** **Save** **Setup to Rx**

«N» ( . «Nothing» – )

«N».


«N».

No.	Status	Symbol	N	T1	T2
R1	<input checked="" type="radio"/>	1x1	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
R2	<input checked="" type="radio"/>	1x2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
R3	<input checked="" type="radio"/>	2x1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
R4	<input checked="" type="radio"/>	2x2	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>

«R2»  
«N». ,

«Save».

«Cancel».

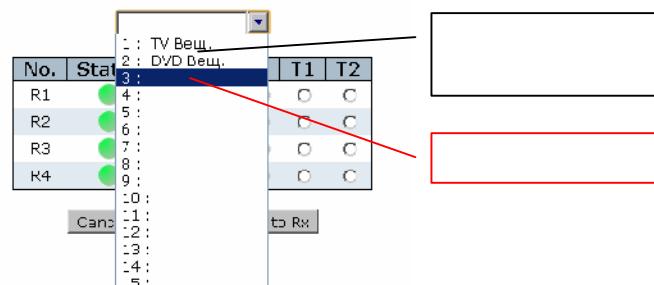

12:00-14:00

No.	Status	Symbol	N	T1	T2
R1	●	1x1	○	○	●
R2	●	1x2	○	●	○
R3	●	2x1	○	○	●
R4	●	2x2	○	●	○

Cancel Save Setup to Rx

«Setup to Rx».

– 15.

### 3.2.3

( «Set» «Rx Group Set»)

«Rx Group Set».



SMM

16-

- «No.» – (**«G1», «G2» . . .**)
- «Source» – ( )
- «Symbol» –
- «Members» – ( ),
- «Clear» –


SMM

16-

, **«Symbol».**

No.	Source	Symbol	Members	Clear
G1	null	Стенд	null	Clear
G2	null	null	null	Clear
G3	null	null	null	Clear

( «Null»),

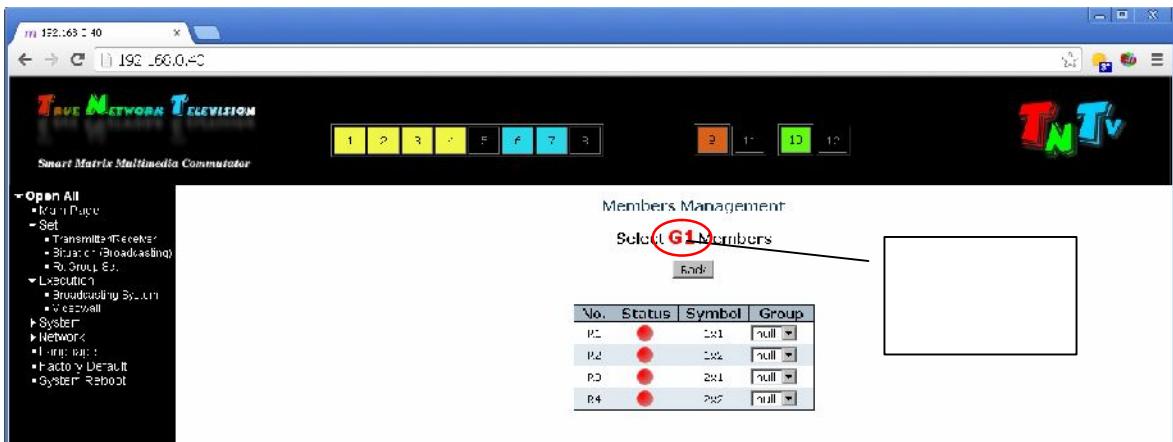

- «No.» – (**«R1», «R2» . . .**)
- «Status» –
- «Symbol» –
- «Group» – , (**«Null»**).

**«Group»**,

, ( ).

No.	Status	Symbol	Group
R1	●	1x1	null
R2	●	1x2	null
R3	●	2x1	null
R4	●	2x2	null

Select **G1** Members

Back

No.	Status	Symbol	Group
R1	●	1x1	G1
R2	●	1x2	G1
R3	●	2x1	null
R4	●	2x2	null

«Back».

«Members»

No.	Source	Symbol	Members	Clear
G1	null	Стенд 1	R1,R2	Clear
G2	null	null	null	Clear
G3	null	null	null	Clear



( ),

«Source»,

No.	Source	Symbol	Members	Clear
G1	null	Стенд 1	R1,R2	Clear
G2	T1: DVD	null	null	Clear
G3	T2: TV Reciev.	null	null	Clear
G4	null	null	null	Clear

, , , ,

«Clear»

!!!

### 3.3

( «Execution»)

SMM

SMM

( - )




«Execution».

### 3.3.1 ( «Execution» «Broadcasting System»)

3.2.2 « » , , , ...

«Broadcasting System».

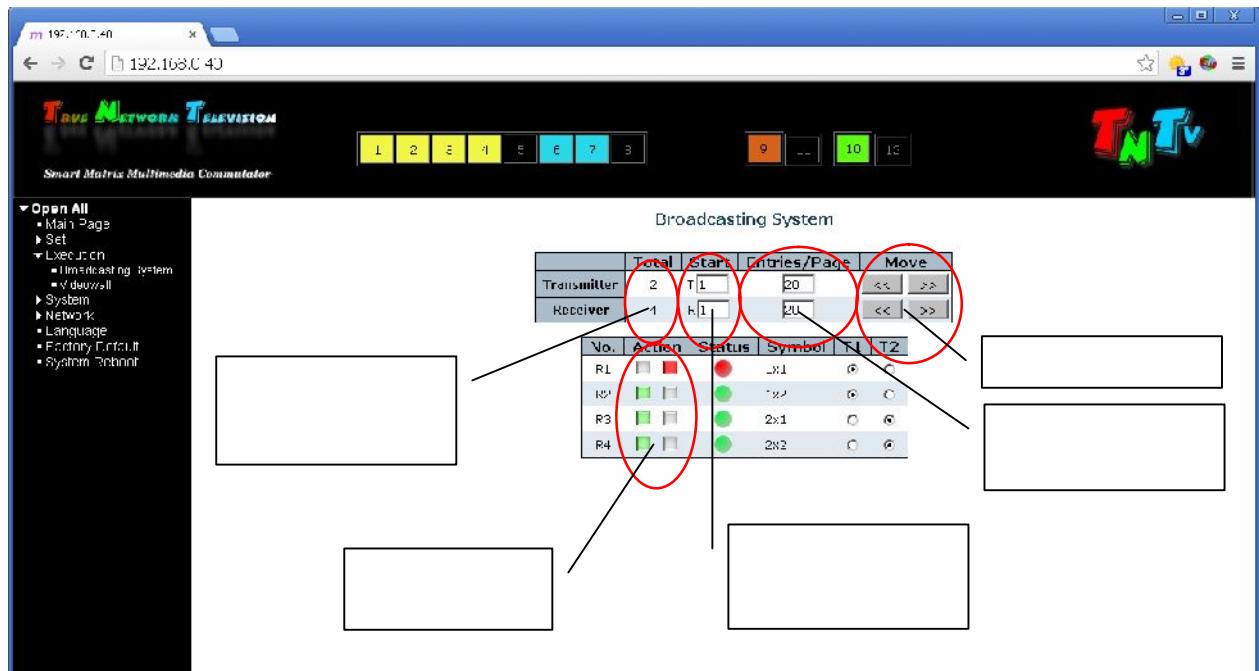

( . . 3.2.2 «

»). «Action» «N»,

«Action»

(«Transmitter») c

(«Receiver»)

«Start»

«Start»,

«Entries/Page».

«<<<» ( ) «>>>» ( ).

«Total»

SMM

### 3.3.2

( «Execution» «Videowall»)

SMM

(HDMI VGA).

«Videowall».



«Video Wall Preset», «Tx Group Assign», «Rx Group Assign».

«Video Wall Preset» – ,

(«Current»).

– 15.

(

) – 16 («G1»... «G16»).


,  
«Tx Group Assign».

(

).  
«Clear»,

«Tx Group Assign» – ,

«Tx Group Assign».

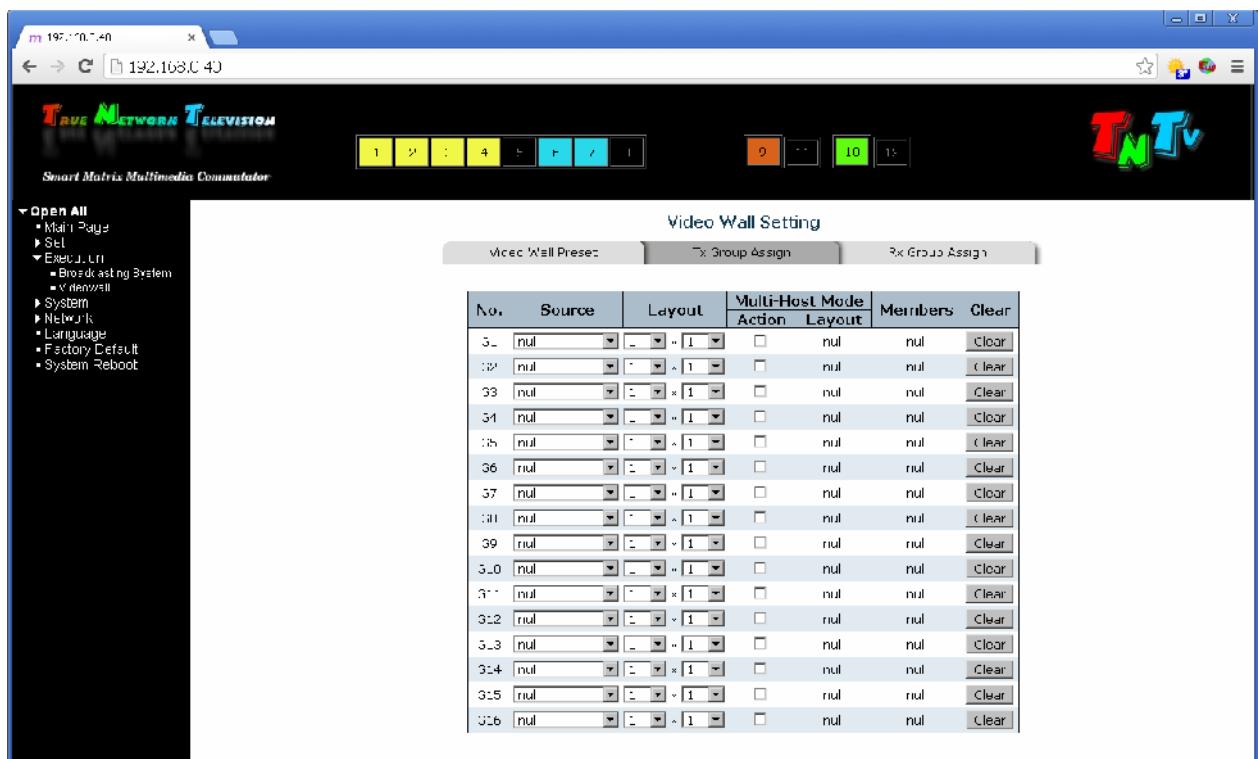

• «No.» –

. («G1», «G2» . ).

• «Source» –

«Null» -

No.	Source	Layout	Multi-Host Mode		Members	Clear
			Action	Layout		
G1	null	1 x 1	<input type="checkbox"/>		null	<input type="button" value="Clear"/>
G2	null	1 x 1	<input type="checkbox"/>		null	<input type="button" value="Clear"/>
G3	T1: DVD T2: TV Ресив.	1 x 1	<input type="checkbox"/>		null	<input type="button" value="Clear"/>
G4	null	1 x 1	<input type="checkbox"/>		null	<input type="button" value="Clear"/>



- ## • «Layout» —

( ) ( ).

SMM

- 16.

- 16x16, 1x1.

No.	Source	Layout	Multi-Host Mode		Members	Clear
			Action	Layout		
G1	null	1	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G2	null	1	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G3	null	2	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G4	null	3	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G5	null	4	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G6	null	5	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G7	null	6	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G8	null	7	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G9	null	8	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G10	null	9	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G11	null	10	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G12	null	11	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G13	null	12	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G14	null	13	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G15	null	14	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G16	null	15	x 1	<input type="checkbox"/>	null	<button>Clear</button>
G17	null	16	x 1	<input type="checkbox"/>	null	<button>Clear</button>

No.	Source	Layout	Multi-Host Mode		Members	Clear
			Action	Layout		
G1	null	2 x 1	<input type="checkbox"/>	null	null	<button>Clear</button>
G2	null	1 x 2	<input type="checkbox"/>	null	null	<button>Clear</button>
G3	null	1 x 3	<input type="checkbox"/>	null	null	<button>Clear</button>
G4	null	1 x 5	<input type="checkbox"/>	null	null	<button>Clear</button>
G5	null	1 x 7	<input type="checkbox"/>	null	null	<button>Clear</button>
G6	null	1 x 9	<input type="checkbox"/>	null	null	<button>Clear</button>
G7	null	1 x 10	<input type="checkbox"/>	null	null	<button>Clear</button>
G8	null	1 x 11	<input type="checkbox"/>	null	null	<button>Clear</button>
G9	null	1 x 12	<input type="checkbox"/>	null	null	<button>Clear</button>
G10	null	1 x 13	<input type="checkbox"/>	null	null	<button>Clear</button>
		1 x 14	<input type="checkbox"/>	null	null	<button>Clear</button>
		1 x 15	<input type="checkbox"/>	null	null	<button>Clear</button>
		1 x 16	<input type="checkbox"/>	null	null	<button>Clear</button>

HDMI

HDCP\*

128.

HDMI

VGA

HDGPR

HDCP

\* HDCP

HDCP

HDCB

128

- «Multi-Host Mode/Action» –

1

No.	Source	Layout	Multi-Host Mode	Members	Clear
Action	Layout				
G1	T1: DVD	2 x 2	<input checked="" type="checkbox"/> 2 / 2	R1 (1 / 2): 1x1 R3 (1 / 2): 2x1 R4 (2 / 2): 2x2	<input type="button" value="Clear"/>
G2	T2: DVD	2 x 2	<input type="checkbox"/> 2 / 2	R2 (1 / 2): 1x1 R4 (1 / 2): 2x2	<input type="button" value="Clear"/>

1- 2-



- «Multi-Host Mode/Layout» – ( )


- «Members» – ( ),  
( ).

No.	Source	Layout	Multi-Host Mode	Members	Clear
Action	Layout				
G1	T1: DVD	2 x 2	<input checked="" type="checkbox"/> 2 / 2	R1 (1 / 2): 1x1 R3 (1 / 2): 2x1 R4 (2 / 2): 2x2	<input type="button" value="Clear"/>
G2	T2: DVD	2 x 2	<input type="checkbox"/> 2 / 2	R2 (1 / 2): 1x1 R4 (1 / 2): 2x2	<input type="button" value="Clear"/>

- «Clear» –

### «Rx Group Assign».

( ),

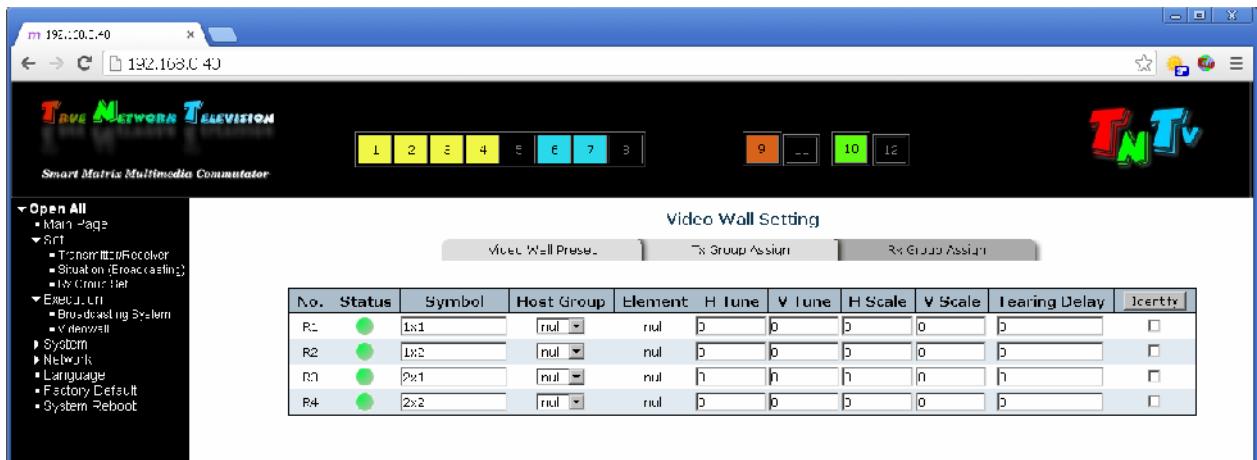

- «No.» – . («R1», «R2» . ).
  - «Status» – .
  - «Symbol» – .
  - «Host Group» – ( )
- SMM  
16-
- , ( )  
)
- «Null» -


**Video Wall Setting**

No.	Source	Layout	Multi-Host Mode Action	Members	Clear
G1	null	1 x 1	□	null	Clear
G2	null	1 x 2	□	null	Clear
G3	null	1 x 1	□	null	Clear
G4	null	1 x 2	□	null	Clear
G5	null	1 x 1	□	null	Clear
G6	null	1 x 2	□	null	Clear
G7	null	1 x 1	□	null	Clear
G8	null	1 x 2	□	null	Clear
G9	null	1 x 1	□	null	Clear
G10	null	1 x 2	□	null	Clear
G11	null	1 x 1	□	null	Clear
G12	null	1 x 2	□	null	Clear
G13	null	1 x 1	□	null	Clear
G14	null	1 x 2	□	null	Clear
G15	null	1 x 1	□	null	Clear
G16	null	1 x 2	□	null	Clear

No.	Status	Symbol	Host Group	Element	H Tune	V Tune	H Scale
R1	Green	1x1	null	null	0	0	0
R2	Green	1x2	null	null	0	0	0
R3	Green	2x1	null	null	1	1	1
R4	Green	2x2	null	null	0	0	0

- «Element» – ( ) . . . ,
  - «Host Group» – ( ) .
- , ( ),

No.	Status	Symbol	Host Group	Element	Tune	V Tune	Scale	V Scale	Tearing Delay	Identify
R1	Red	1x1	nul	1 2	n	n	n	n	r	<input type="checkbox"/>
R2	Green	1x2	nul	1 nul	0	0	0	0	c	<input type="checkbox"/>
R3	Green	2x1	nul	nul	0	0	0	0	c	<input type="checkbox"/>
R4	Green	2x2	nul	nul	0	0	0	0	c	<input type="checkbox"/>

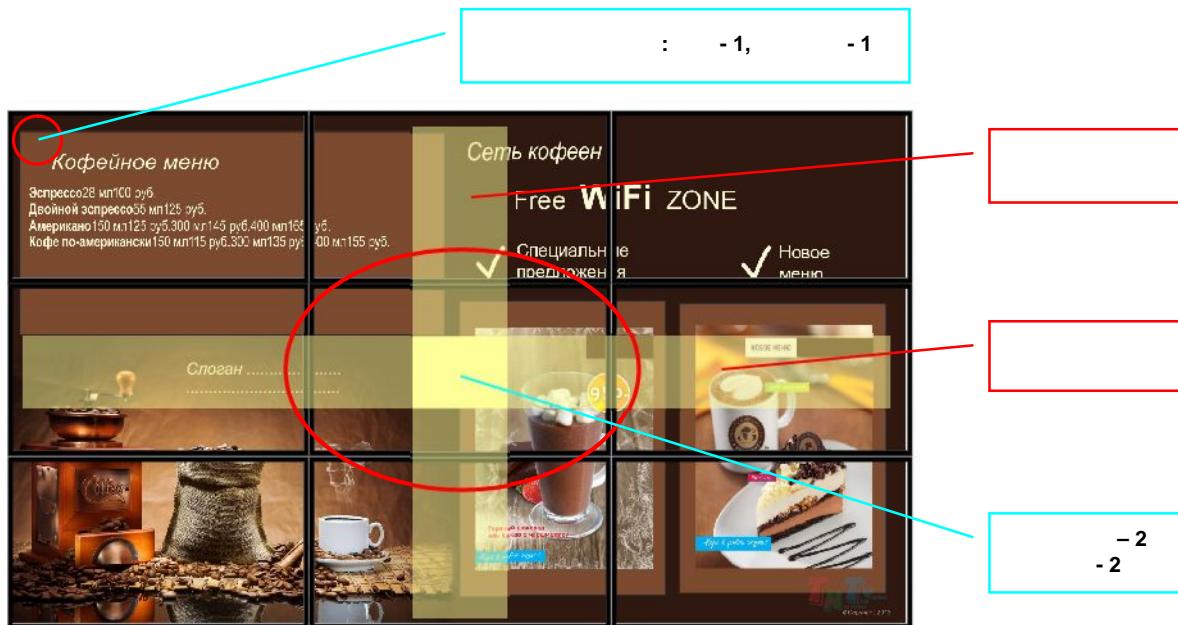

(«**Multi-Host Mode**»),




No.	Status	Symbol	Host Group	Element	II Tune	V Tune	II Scale	V Scale	Tearing Delay	Identity
R1	Green	Ix1	I61	1	0	0	0	0	0	<input type="checkbox"/>
R2	Green	Ix2	I62	2	0	0	0	0	0	<input type="checkbox"/>
R3	Green	Ix1	I61	1	0	0	0	0	0	<input type="checkbox"/>
R4	Green	Ix2	I61	2	0	0	0	0	0	<input type="checkbox"/>

## • «H Tune» –

(



«H Tune».

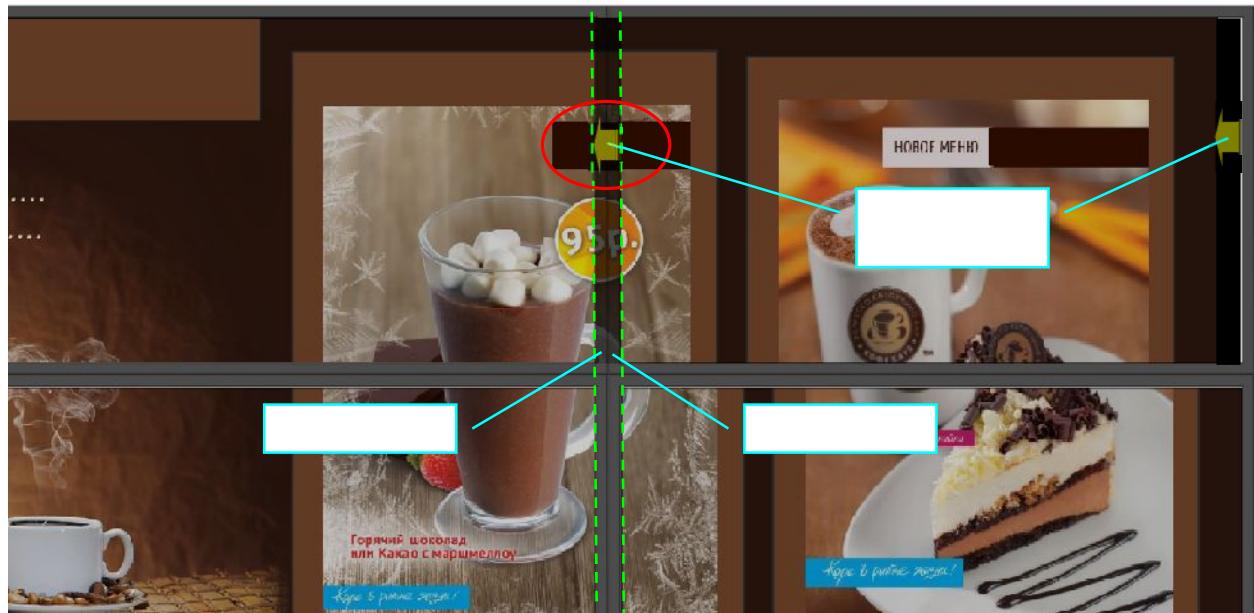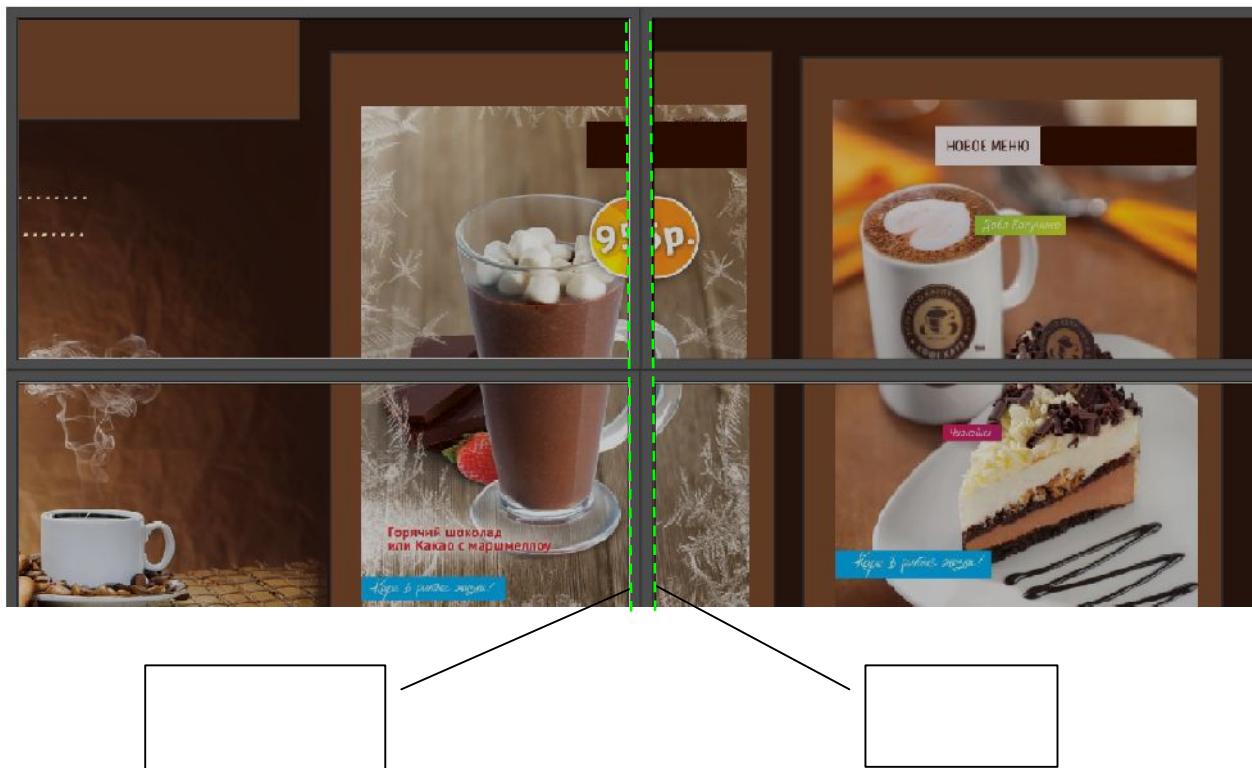

).

10

(

(

Scale»)

( . «H

: -1000 1000.

- «V Tune» –

«H Tune»

- «H Scale» –

«H-Tune».

««**H** Tune»»).



: 0 10000.

- «V Scale» –

«H Scale».

: -10000 10000.

«H Tune», «V Tune», «H Scale» «V Scale»

1x1

- «Tearing Delay» –

( ).

«Tearing Delay»

0 ,

( ).

- «Identify» – ( ).

## «Identify».

«R1», «R2», «R3»,

### «Identify»

( ),

( ),

, «Video Wall Preset»,

**«Save Current».**

«Clear».


**«Apply this setting».**


16-

( ) ( )

Разделение IP

Видеостена "B"

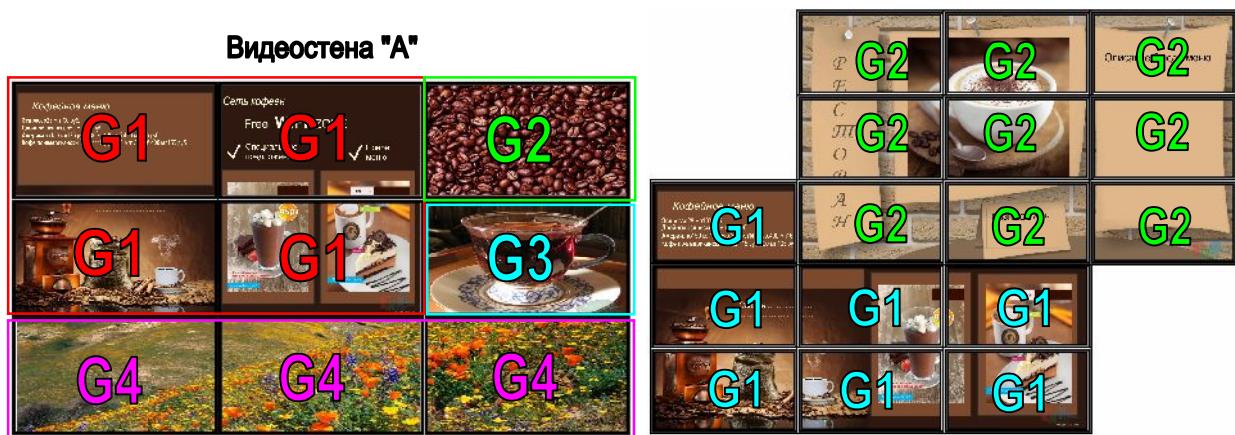

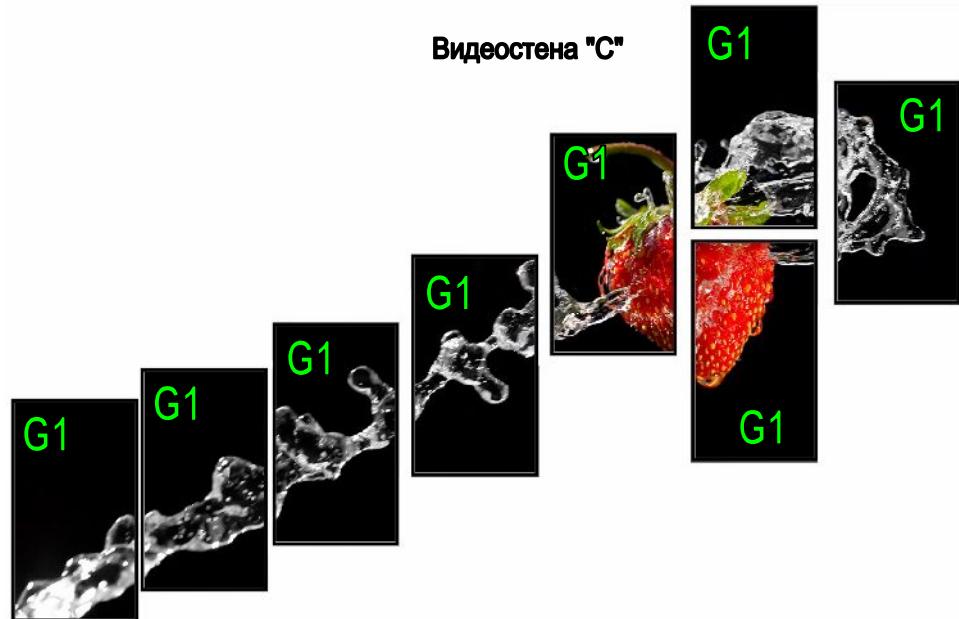

«А» ( . . . ),


,  
4- , «G1», «G2», «G3» «G4».  
4 ,

(«G1», «G2», «G3» «G4»),

, «Tx Group Assign»,  
4.  
( . . . ). ,  
, «G1»,  
2 2 ( . . . ). «G2»,  
1 1 . .

**«Rx Group Assign».**

,  
**«Host Group»** («G1», «G2», «G3» «G4»)  
**«Element».**

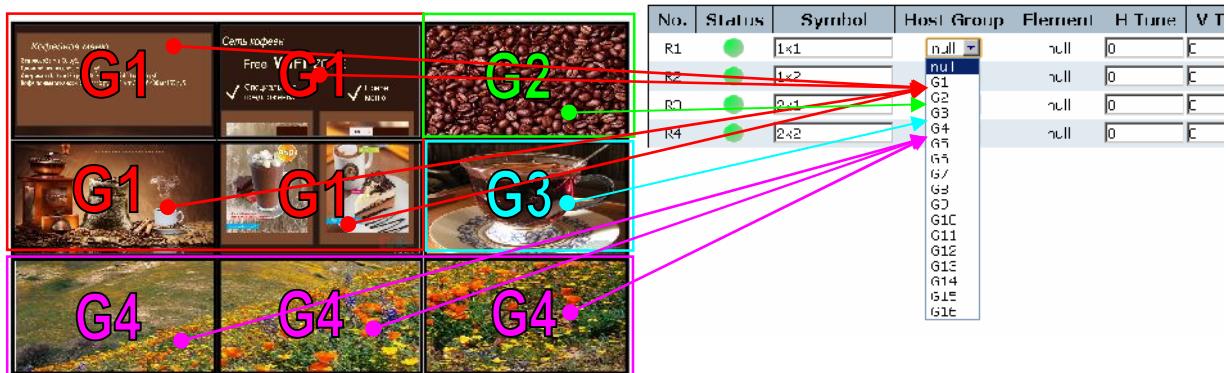

(                  «  »                  )

SMM

{ «System» }

SMM

• — «Save».

— «Reset».

Autumn 2001 • Volume 28 Number 4 • ISSN 0888-4016 • \$10.00

3.4

( «System»)

- — «Save».
- — «Reset».
- — «Refresh».
- — «Auto-Refresh».

### 3.4.1 ( «System» «System Configuration»)


«Information Message»

The screenshot shows the 'Information Message' page of the True Network Television Smart Matrix Multimedia Commutator. The left sidebar menu is open, showing the 'System Configuration' option under 'System'. The main content area displays system information such as Contact, System Name (SMMC), Location (TNTv Digital Signage), Description (TNTv Digital Signage), MAC Address (00-00-00-FF-FF-FF), System Date (1970-01-01 00:00:00), System Uptime (0 days 0 hours 0 minutes 0 seconds), Software Version (Pstek MM11111 v2.40), and Software Date (2013-06-20 05:25:53). There is a 'Refresh' button at the bottom.

«System Information Configuration»

The screenshot shows the 'System Information Configuration' page of the True Network Television Smart Matrix Multimedia Commutator. The left sidebar menu is open, showing the 'System Configuration' option under 'System'. The main content area displays configuration settings for System Contact, System Name (SMMC), System Location, System Description (TNTv Digital Signage), and System Timezone Offset (minutes) (240). There are 'Save' and 'Reset' buttons at the bottom.

### 3.4.2 ( «System » «IP Configuration»)

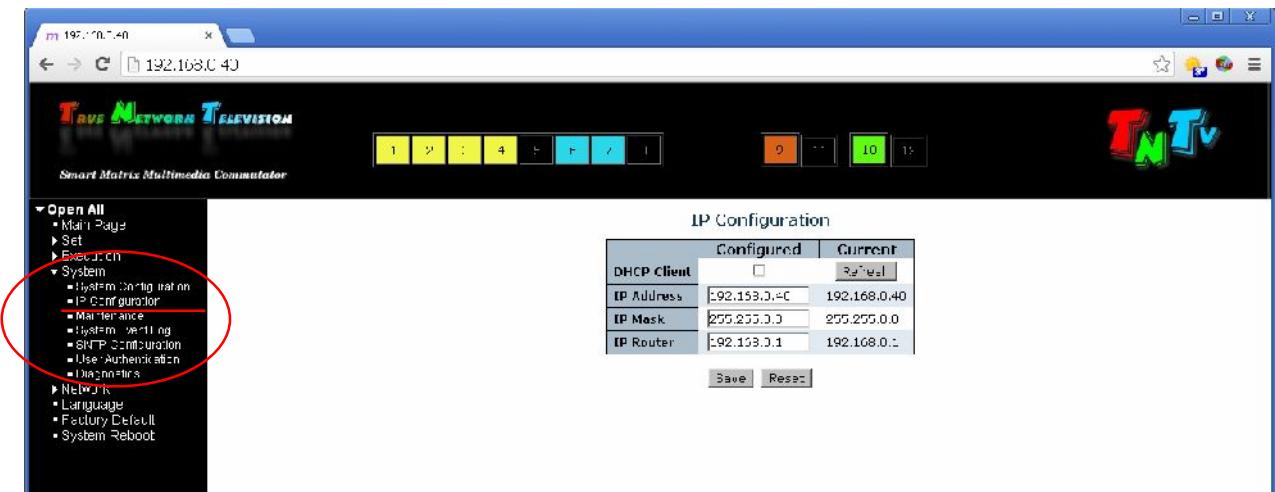

### 3.4.3 ( «System » «Maintenance»)

«Firmware Update»



«Configuration Backup»


«Save configuration».

«Configuration Backup»



SMM

«Configuration Backup»

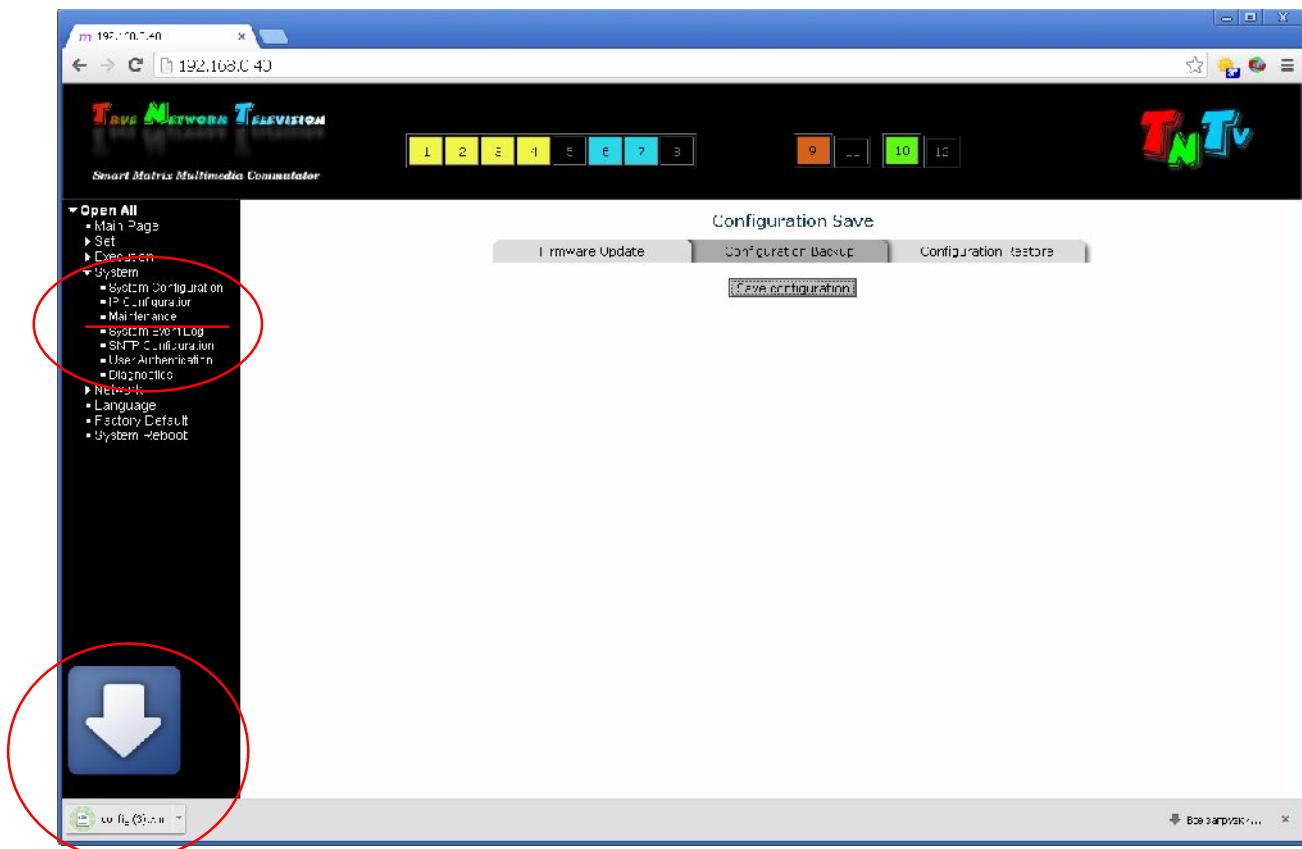


«Configuration Restore»,  
«Upload».





### 3.4.4 ( «System »    «System EventLog»)

«Syslog Configuration»

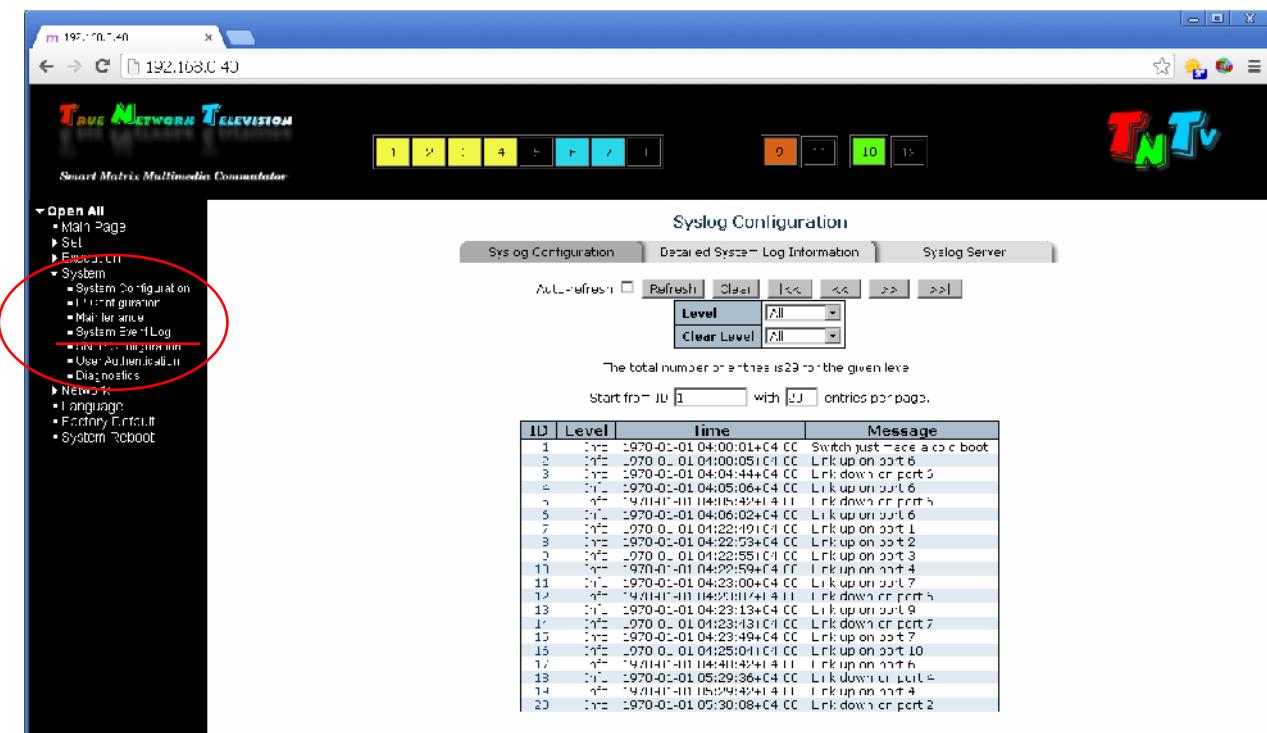

Detailed System Log Information

Svs ou Ctr Configuration   Detailed System Log Information   Syslog Server

Message

«Syslog Server»

Syslog Server

Server Mode: Disabled  
Server Address:  
Syslog Level: Info  
Debug   Info   Warning   Error

### 3.4.5 ( ) ( «System » «SNTP Configuration»)

SNTP

SNTP Configuration


SNTP Server:   Timezone Offset (minutes): 4H11  
Java   Reset

### 3.4.6 ( «System » «User Authentication»)

SMM , (admin) (user).


, ,

, 4 « ».

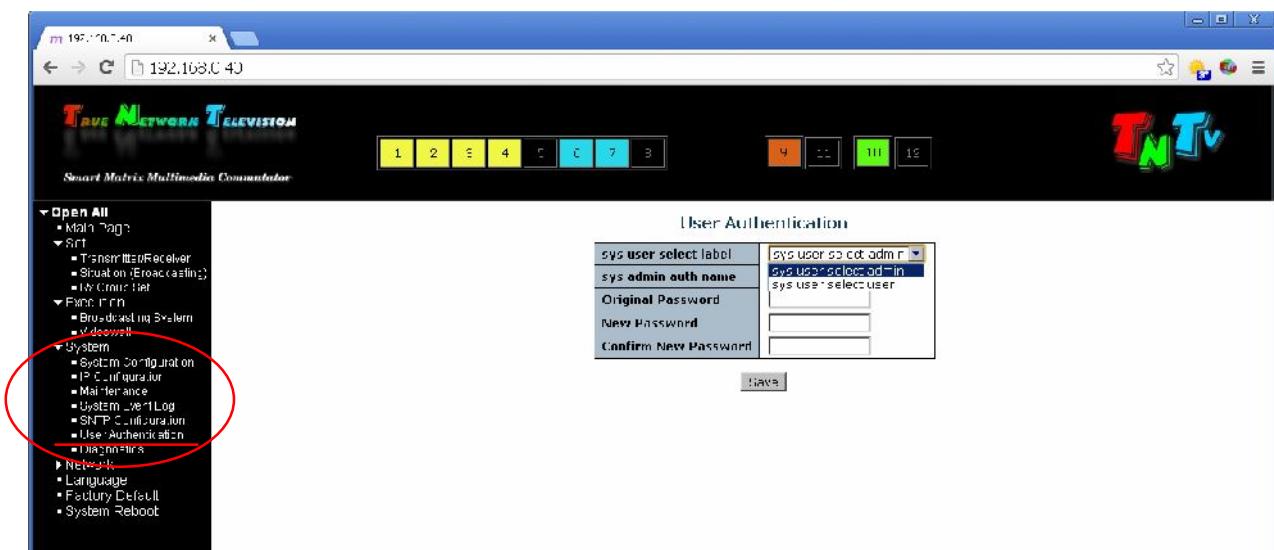


### 3.4.7 ( «System » «Diagnostics»)

SMM ( 3.1 ).

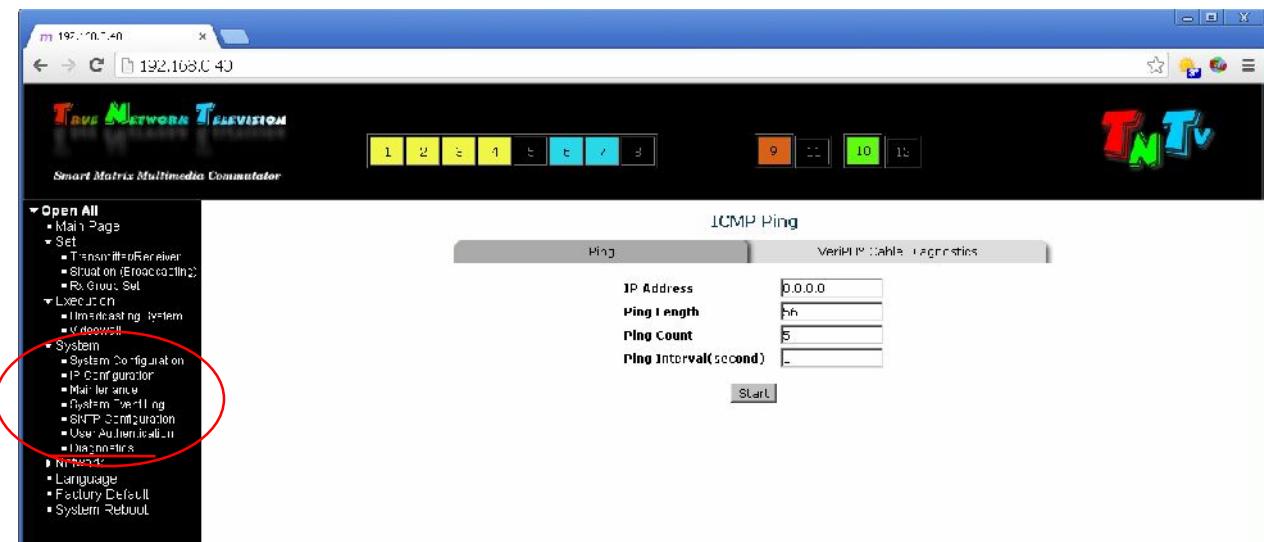

«VeriPHY Cable Diagnostics»

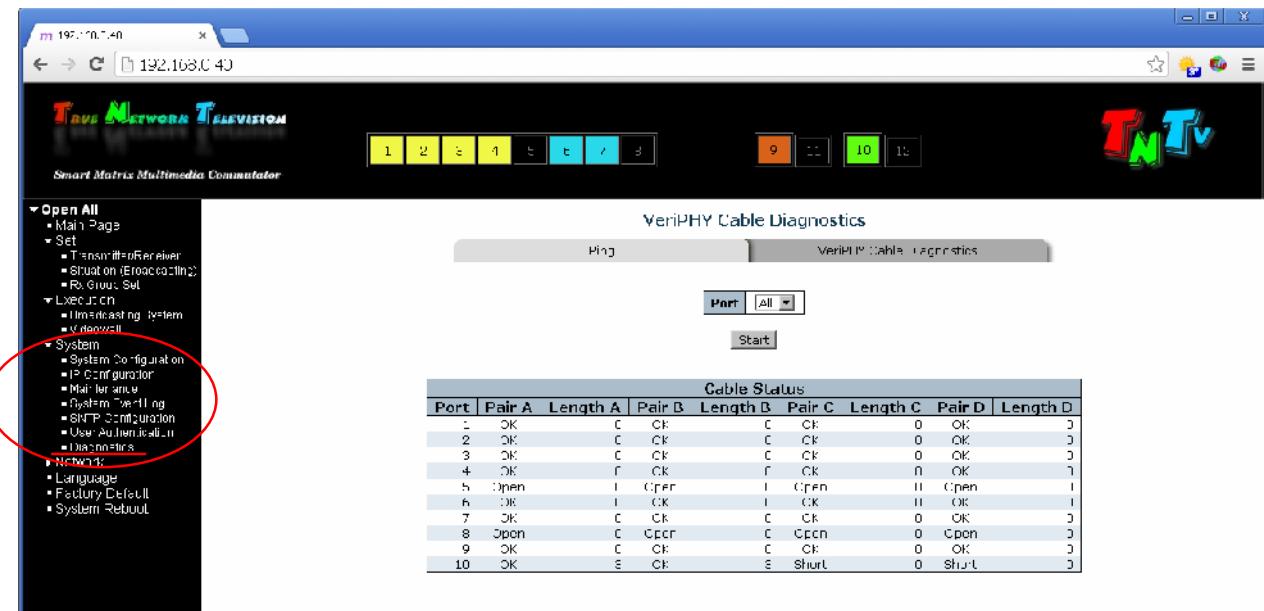

## 3.5 ( «Network»)

### 3.5.1 ( «Network» «Protocol»)

The screenshot shows the 'Protocol Configuration' section of the web interface. On the left, a sidebar menu is circled in red, highlighting the 'Protocol' option under the 'Network' section. The main content area displays a table with four rows:

Protocol	Enabled	Message
IGMP	<input type="checkbox"/>	IGMP Snooping Status
SNMP	<input checked="" type="checkbox"/>	SNMP System Configuration
IGMP	<input checked="" type="checkbox"/>	IGMP Snooping Status
LLDP	<input checked="" type="checkbox"/>	LLDP Neighbors Information

At the bottom right of the table are 'Save' and 'Reset' buttons.

### 3.5.2 MAC ( «Network » «MAC Table»)

«MAC Address Table Configuration»

The screenshot shows the 'MAC Address Table Configuration' section. Similar to the previous interface, the left sidebar menu has the 'Protocol' option circled in red. The main content area is divided into two tabs: 'MAC Address Table Configuration' (selected) and 'MAC Address Table Statistics'. Below these tabs is an 'Aging Configuration' section with fields for 'Disable Automatic Aging' (checkbox) and 'Age Time' (dropdown set to '5').

Below the aging configuration is the 'MAC Table Learning' section, which contains a grid of 12 columns labeled 1 through 12. Each column has three status options: 'Auto' (radio buttons), 'Disable' (radio buttons), and 'Secure' (radio buttons). The first column (1) has all 'Auto' buttons selected.

At the bottom is the 'Static MAC Table Configuration' section, featuring a table with columns for 'Delete', 'VLAN ID', 'MAC Address', and 'Port Members'. A row is shown with 'Delete' (checkbox), 'VLAN ID' (dropdown), 'MAC Address' (dropdown), and 'Port Members' (checkboxes for ports 1 through 12). Below the table are 'Add new static entry', 'Save', and 'Reset' buttons.



**MAC Address Table**

Start from VLAN [1] and MAC address [1-11-1111-1111] with [20] entries per page

Type	VLAN	MAC Address	Port Members
Dynamic	-	00-1A-00-00-00-0F	✓
Dynamic	1	00-17-00-00-00-00	✓
Dynamic	-	00-17-00-00-00-00	✓
Dynamic	-	00-17-00-00-00-00	✓
Dynamic	-	00-17-00-00-00-00	✓
Dynamic	-	00-17-00-00-00-00	✓
Dynamic	-	00-17-00-00-00-00	✓
Dynamic	-	00-17-00-00-00-00	✓
Static	1	00-17-00-00-00-00	✓
Dynamic	-	00-17-00-00-00-00	✓
Static	-	00-17-00-00-00-00	✓
Static	1	00-17-00-00-00-00	✓
Static	1	00-17-00-00-00-00	✓

### 3.5.3

( «Network»    «Port Statistics»)

**Traffic Overview**

Port	Receive Packets	Transmit Packets	Bytes Received	Bytes Transmit	Errors Received	Errors Transmit	Drops Received	Drops Transmit	Filtered Received
1	12154	8309750	225437	11287103882	0	0	0	0	0
2	14741	10117242	244717	4951147512	0	0	0	0	0
3	23395	8631455	2579125	11861305150	0	0	0	0	0
4	21171	8813557	2374582	11085243115	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0
6	--/13721	35133	5720353095	3324726	0	0	442	0	1017
7	255111	17414	24111555	10533157	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0
9	17111	11454	1411447	11543115	0	0	0	0	514
10	27412	123725	5353292	112355960	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0

**Detailed Port Statistics Port 1**

Receive Total		Transmit Total	
Rx Packets	918	Tx Packets	8336944
Rx Orts	2247517	Tx Orts	11204094776
Rx Unicst	16255	Tx Unicst	48826
Rx Multicast	2141	Tx Multicast	181177
Rx Broadcast	21	Tx Broadcast	347
Rx Pause	0	Tx Pause	0
Receive Size Counters		Transmit Size Counters	
Rx 64 Bytes	1441	Tx 64 Bytes	124711
Rx 65-127 Bytes	32222	Tx 65-127 Bytes	17082
Rx 128-255 Bytes	153	Tx 128-255 Bytes	14275
Rx 256-511 Bytes	3843	Tx 256-511 Bytes	747596
Rx 512-1023 Bytes	12	Tx 512-1023 Bytes	457983
Rx 1024-1575 Bytes	1	Tx 1024-1575 Bytes	400595
Rx 1576-Bytes	0	Tx 1576-Bytes	0
Receive Error Counters		Transmit Error Counters	
Rx Drops	0	Tx Drops	0
Rx CRC/Alignment	1	Tx Late/Frx. Cnll.	0
Rx Undersize	0		
Rx Oversize	1		
Rx Fragments	0		
Rx Jabber	0		
Rx Filtered	0		

### 3.5.4

( «Network»    «Port Configuration» )

**Traffic Overview**

Port	Speed Current	Speed Configured	Link
1	1Gfdx	Auto	Up
2	1Gfdx	Auto	Up
3	1Gfdx	Auto	Up
4	1Gfdx	Auto	Up
5	1Gfdx	Auto	Up
6	1Gfdx	Auto	Up
7	1Gfdx	Auto	Up
8	Down	Auto	Up
9	1Gfdx	Auto	Up
10	1Gfdx	Auto	Up
11	Down	Auto	Up
12	Down	Auto	Up

## 3.5.5 (Trunk) («Network» «Port Trunk»)

«Trunk Configuration»

«LACP Port Configuration»



The screenshot shows the LACP System Status page. The left sidebar has a red circle around the 'Network' section, specifically the 'LACP' subsection which includes 'LACP Port Detection'. The main content area displays a table titled 'LACP System Status' with the following columns: Aggr ID, Partner System ID, Partner Key, Last Changed, and Local Ports. A note at the top of the table says 'No units enabled or no existing partners'.

Aggr ID	Partner System ID	Partner Key	Last Changed	Local Ports
No units enabled or no existing partners				

«LACP Status»

The screenshot shows the LACP Status page. The left sidebar has a red circle around the 'Network' section, specifically the 'LACP' subsection which includes 'LACP Port Detection'. The main content area displays a table titled 'LACP Status' with the following columns: Port, LACP, Key, Aggr ID, Partner System ID, and Partner Port. The table lists ports 1 through 12, all of which have 'No' in the LACP column and '-' in the other columns.

Port	LACP	Key	Aggr ID	Partner System ID	Partner Port
1	No	-	-	-	-
2	No	-	-	-	-
3	No	-	-	-	-
4	Nu	-	-	-	-
5	Nu	-	-	-	-
6	Nu	-	-	-	-
7	No	-	-	-	-
8	No	-	-	-	-
9	No	-	-	-	-
10	Nu	-	-	-	-
11	Nu	-	-	-	-
12	Nu	-	-	-	-

LACP Statistics

Port	LACP Received	LACP Transmitted	Discarded	
			Unknown	Illegal
1	0	0	0	C
2	0	0	0	C
3	0	0	0	C
4	1	11	11	I
5	0	0	0	C
6	0	0	0	C
7	0	0	0	C
8	0	0	0	C
9	0	0	0	C
10	0	0	0	C
11	1	11	11	I
12	0	0	0	C


### 3.5.6

( «Network»    «Loopback Detection»)

Loopback Detection Configuration

Port	Detect	State	Unlock
1	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
2	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
3	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
4	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
5	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
6	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
7	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
8	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
9	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
10	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
11	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>
12	<input type="checkbox"/>	Unlocked	<input type="checkbox"/>

### **3.6** ( «Language»)

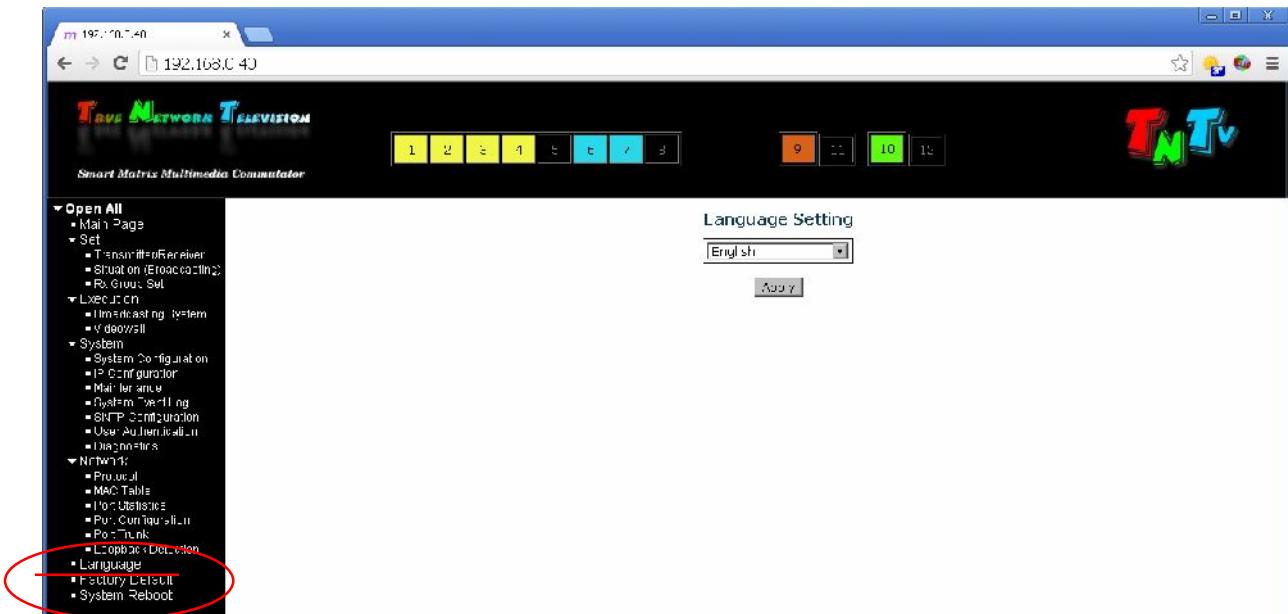

**3.7** ( «Factory Default»)



IP


IP SMM

SMM


(  
No.)

## «Keep current IP».

## «Save».

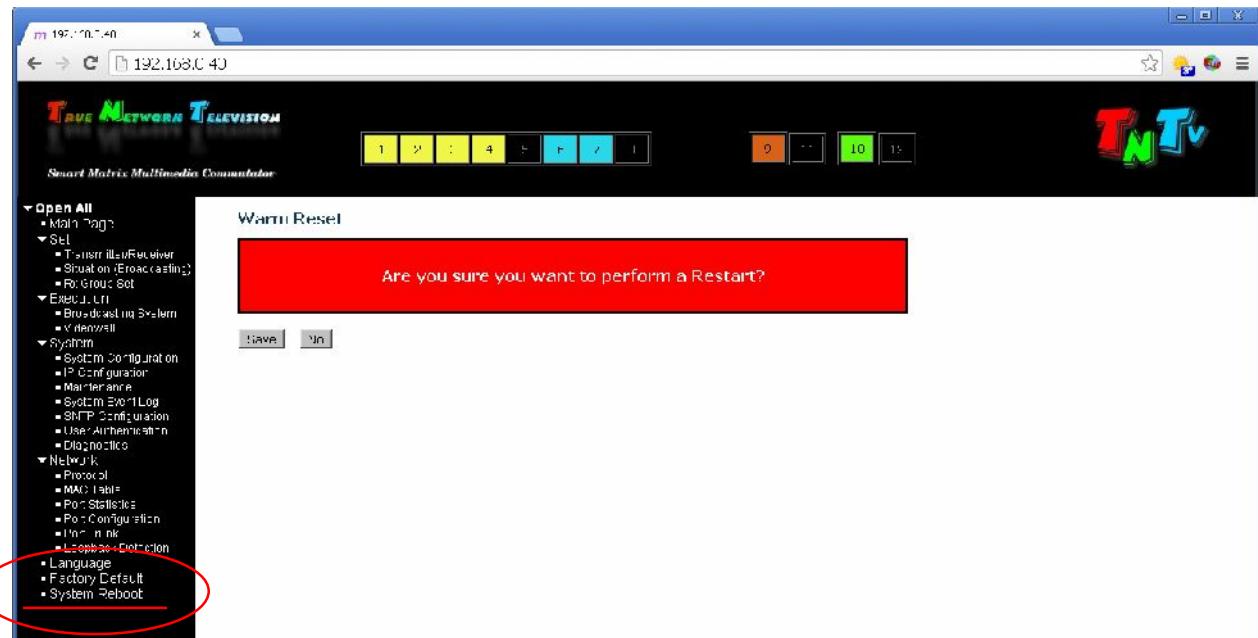

## ГЛАВА 4: Меню Пользователя

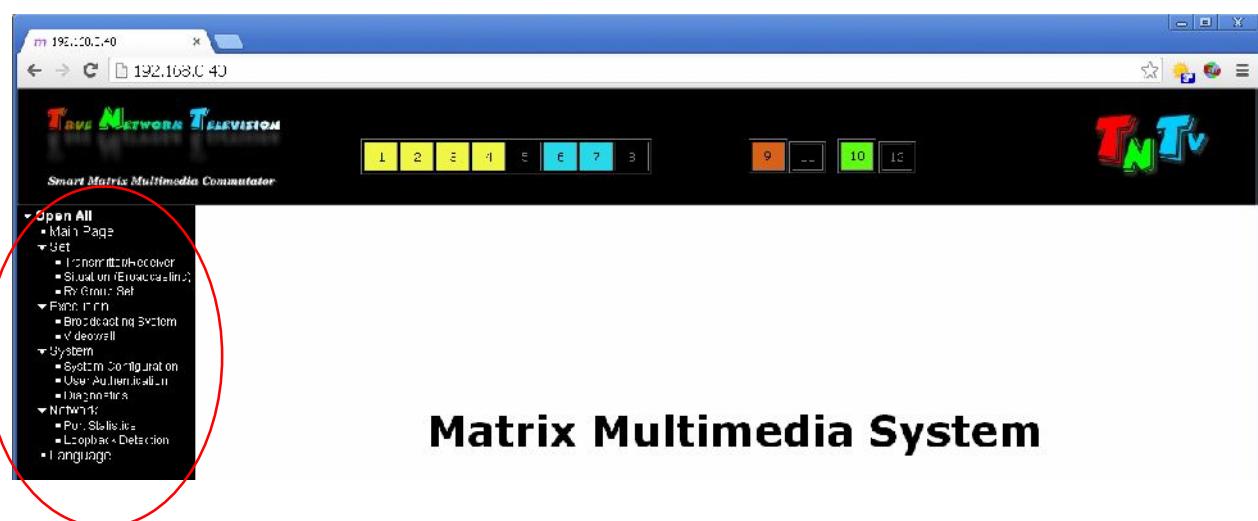

## 4.1 ( «Set»)

### 4.1.1 ( «Set» «Transmitter/Receiver»)

The screenshot shows the 'Transmitter/Receiver Set' configuration page. On the left, a sidebar menu includes 'Open All', 'Main Page', 'Set' (selected), 'Transmitter/Receiver' (selected), 'Urgenton (Lюбое время)', 'Rx Group: Sel', 'Execution', 'Multicast System', 'V doyavil', 'System Configuration', 'User Authentication', 'Diagnostic', 'Network', 'Port Statistics', 'Laptop Detection', and 'Language'. The main area displays a table for 'Transmitter' with two entries:

No.	IP Address	MAC	Port	Symbol	Status	Explain	Tx Mode	ATI Mode
1	192.168.0.20	00:17:0E 00:12:6C	6	DVD	<span style="color: green;">●</span> Странд	Video	OFF	
2	192.168.0.27	00:17:0F 00:08:08	7	TV/Ретиб.	<span style="color: green;">●</span> Странд	Graphic	OFF	

The screenshot shows the 'Transmitter/Receiver Set' configuration page. The sidebar menu is identical to the first screenshot. The main area displays a table for 'Transmitter' with four entries:

No.	IP Address	MAC	Port	Symbol	Status	Explain	USB
R1	192.168.0.63	00:17:0E 00:09:0C	4	1x1	<span style="color: green;">●</span> Странд	—	CFF
R2	192.168.0.11	00:17:0E 00:09:0D	5	1x2	<span style="color: green;">●</span> Странд	—	CFF
R3	192.168.0.64	00:17:0E 00:08:F4	1	2x1	<span style="color: green;">●</span> Странд	—	CFF
R4	192.168.0.65	00:17:0E 00:08:FC	3	2x2	<span style="color: green;">●</span> Странд	—	CFF

## 4.1.2

( «Set» «Situation(Broadcasting)»)

The screenshot shows the 'Smart Matrix Multimedia Comutator' web interface. The left sidebar has a tree menu with 'Open All' expanded, showing 'Main Page', 'Sel' (selected), 'Execution', 'System', 'Network', and 'Language'. Under 'Sel', 'TransmitterReceiver' is expanded, showing 'Situation (Broadcasting)'. The main content area is titled 'Situation (Broadcasting)' with a dropdown menu 'TV Bsch.' set to 'TV Bsch.'. Below is a table with columns: No., Status, Symbol, N, T1, T2. The rows show four entries: R1 (Status: green, Symbol: 1x1, N: 0, T1: 0, T2: 0), R2 (Status: green, Symbol: 1x2, N: 0, T1: 0, T2: 0), R3 (Status: green, Symbol: 2x1, N: 0, T1: 0, T2: 0), and R4 (Status: green, Symbol: 2x2, N: 0, T1: 0, T2: 0). A 'Setup' button is at the bottom.

## 4.1.3

( «Set» «Rx Group Set»)


The screenshot shows the 'Smart Matrix Multimedia Comutator' web interface. The left sidebar has a tree menu with 'Open All' expanded, showing 'Main Page', 'Sel' (selected), 'TransmitterReceiver' (expanded), 'Small rx (Fmarr 4=1in)', 'Rx Group Set' (selected), 'Execution', 'System', 'Network', and 'Language'. The main content area is titled 'Rx Group Set' with a table showing 'Source' and 'Symbol' for each entry. The table has columns: No., Source, Symbol, Members. There are 315 entries, all with 'Source' set to '11: JWD' and 'Symbol' set to 'Symbol 1'. The 'Members' column shows values like 'R1, R2', 'R3, R4', and 'null'.

## 4.2

( «Execution»)

### 4.2.1

( «Execution» «Videowall»)

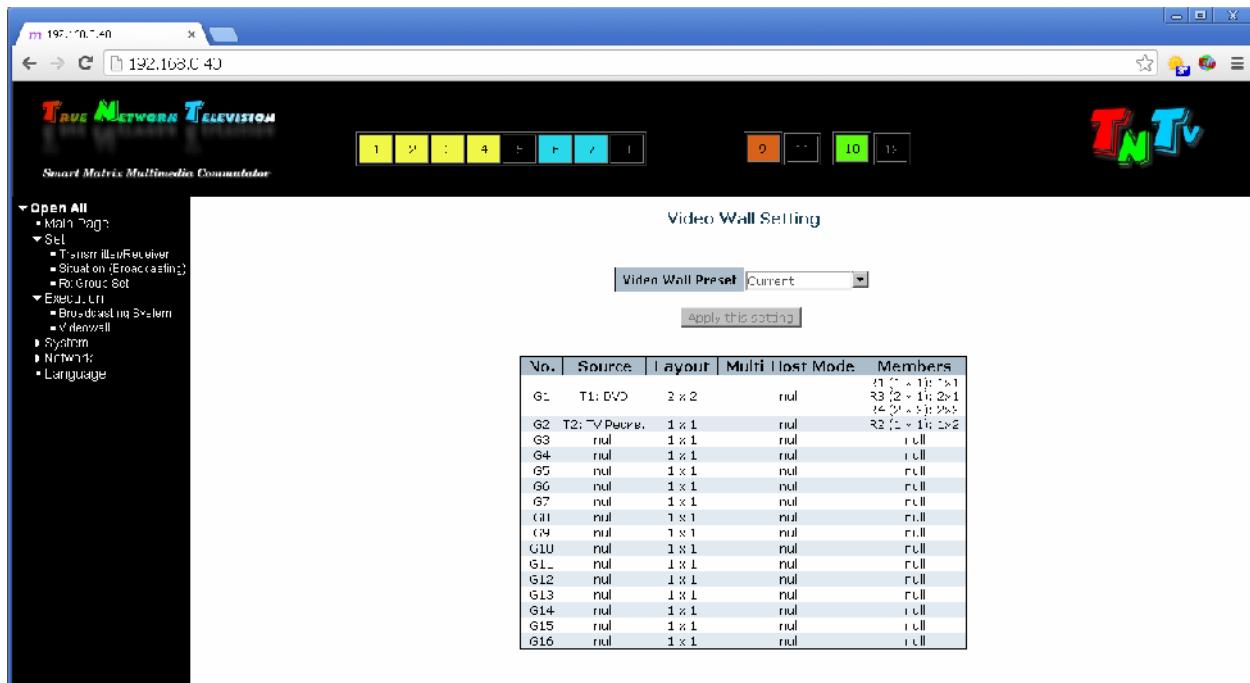


## 4.3

( «System»)

### 4.3.1

( «System » «User Authentication»)

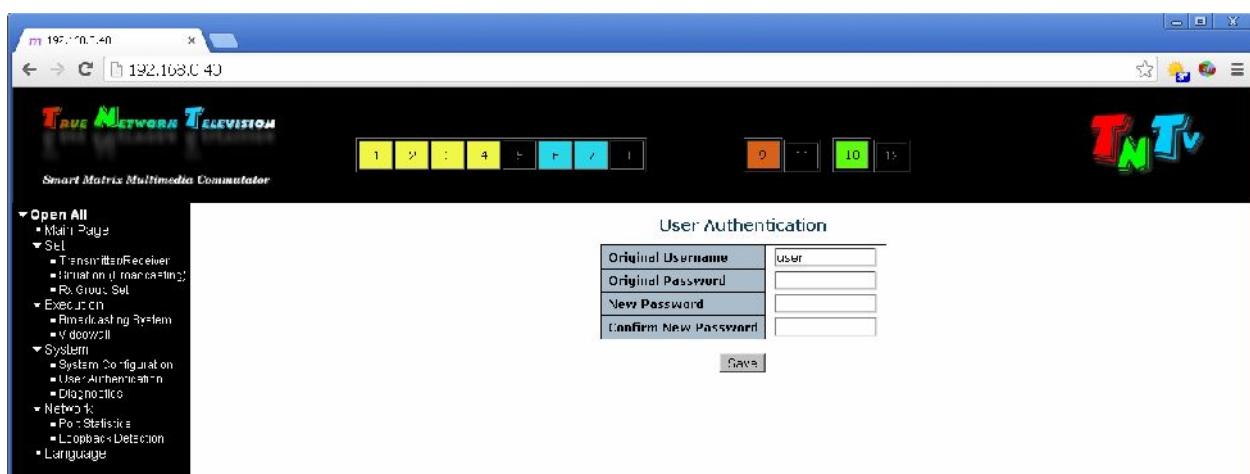

5:

SMM

(

)

5.1

SMM

19'',

( ).

5.2

SMM

,

1Gbit/s,

5

SMM

,

(

SMM ,  
SMM ,

## 5.3

	RJ45 – 24 Mini GBIC (SFP) – 4 ( ) RS232 – 1 (DB9) – 1
.	1920x1080 (1080P).
.	100 ( - ), 100 ( - )
.	,
	SMM - <b>12</b>
Ethernet	GigabitEthernet (1000Base-T)
	TCP/IP
	– 1 ( ) – 1 ( )
	-15...+55°
	0...+45 °
	5...90%
	AC 100-220V
	2270 .
	445x170x45
	(LAN)